


# Installing Net Posts

1. When installing posts, make sure they will rest no higher than 1" above the net cord, at a height of about 3' - 6" above the court surface. The footings should be a minimum of 3' - 6" below surface or to the frost depth of your area. (see diagram)
2. Place footings so that the center line of the posts will be 3' outside the court on each side.
3. The center lines of posts should be positioned 42'


- apart for Doubles court and 33' apart for Singles court. Post sleeves are recommended because they allow easy removal of the posts for resurfacing, maintenance, post repair/replacement, and alternate uses of the court.
4. During the off season or when winterizing, it is best to remove the net posts and plug the sleeves with sleeve covers to prevent moisture and dirt from falling in.

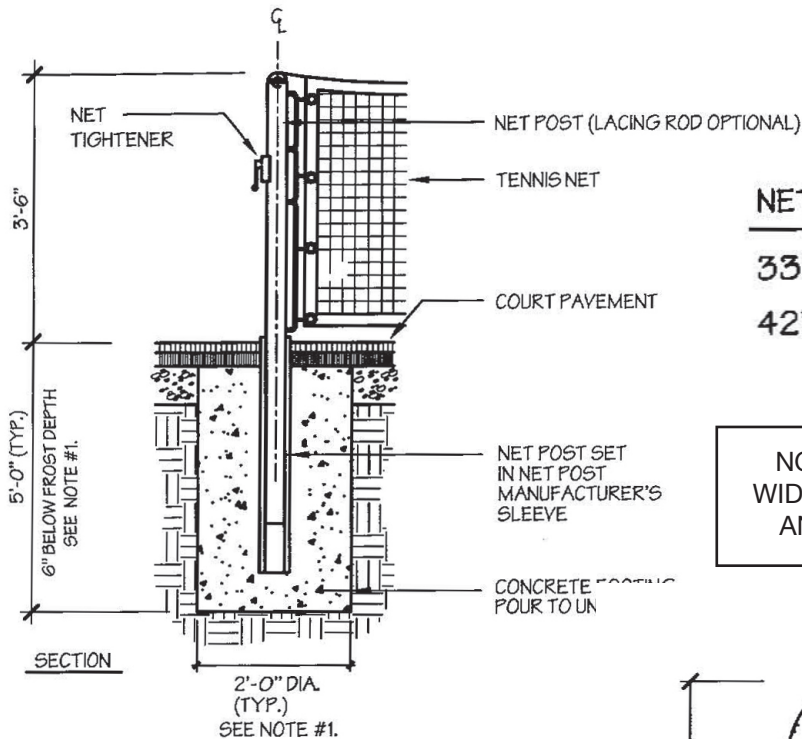

## NET POST LOCATIONS:

33'-0"  $\phi$  TO  $\phi$  SINGLES COURT  
42'-0"  $\phi$  TO  $\phi$  DOUBLES COURT

NOTE #1: FOUNDATION DEPTH AND WIDTH MAY VARY WITH THE SOIL TYPE AND STRENGTH OF THE NET POST

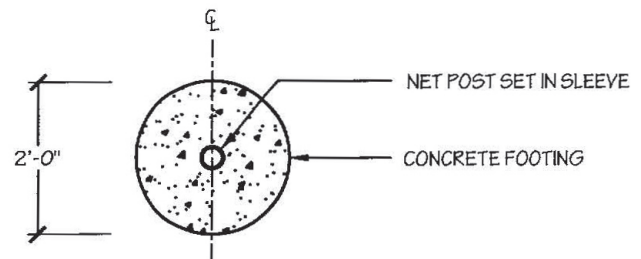

Drawings are illustrative only and we accept no responsibility for their use. Reprinted from the Tennis Facilities Construction and maintenance Manual by permission of the American Sports Builders Association. ©ASBA